

Virtuo 30 Clic

CONDITIONS

SUBSTRATES

ACCESSORIES


INSTALLATION

LAYING CONDITIONS


SUBSTRATE EVENNESS	Flatness requirement: < 5 mm / 2 metre ruler and < 1 mm / 20 cm ruler	Flat, clean, sound, dry and solid substrate.
STORAGE	At least 24 hours prior to installation	Store the floor covering in the room where it is going to be laid.
LAYING TEMPERATURE	+ 15°C < T < + 26°C	Ideally 20°C.
PERIMETER EXPANSION GAP	4 to 5 mm	Around the edges of the room, fixed objects and door frames. The gap must be covered by a finishing profile. Wet rooms (e.g. bathrooms): MS Polymer or PU sealant under the finishing profile.
DIVISIONS	Every 10 linear metres or surface area > 150 m ²	Each closed room or premises must be considered separately. Divide the tiles/planks lengthwise by applying an adhesive (such as Gerflor Fix & Free 100) or a gap covered with a ROMUS finishing profile.
DIRECT SUNLIGHT (SUNNY AREAS, BAY WINDOWS, SKYLIGHTS, SKYDOMES, ETC.)	Floor temperature < 60°C	Loose laying is allowed as long as the ambient temperature is regulated and the floor temperature doesn't exceed 60°C
VERANDA/CONSERVATORY	Prohibited	Prohibited, irrespective of the substrate.
FIRST USE	Immediately after installation	

USAGE CONDITIONS


USAGE TEMPERATURE	+ 8°C < T < + 35°C	
STATIC LOADS	< 30 kg/cm ² and < 200 kg/support	Do not use rubber end caps. Use flat (not tapered) end caps without any pattern that are suitable for PVC. Use end caps on furniture legs.
CASTOR CHAIRS	PVC-compatible castors according to EN 12529	Recommendation: protective mat beneath castor chairs.

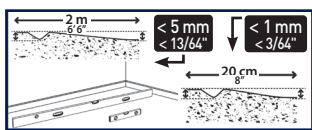


SUBSTRATE EVENNESS

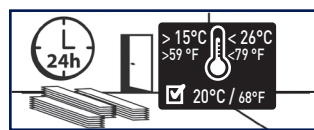


STORAGE

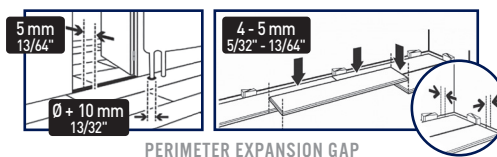

PERIMETER EXPANSION GAP

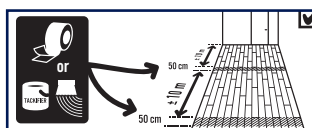



DIVISIONS

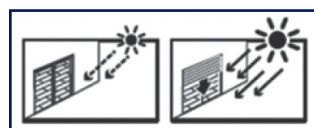


DIRECT SUNLIGHT



STATIC LOADS

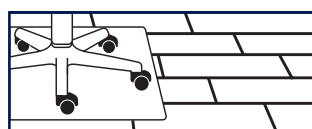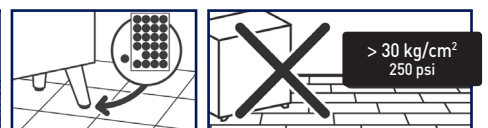

CASTOR CHAIRS

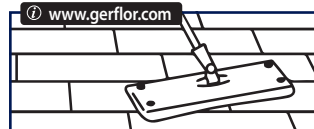

MAINTENANCE

IMPORTANT : The information in this document is valid from: 21/06/01 and is subject to change without notice. As we carry out continuous technical improvements, our customers should check with us that this document is still in force before starting any work.

Gerflor

Virtuo 30 Clic

CONDITIONS

SUBSTRATES



ACCESSORIES

INSTALLATION

SUBSTRATE

CONDITIONS

For installing this floor covering

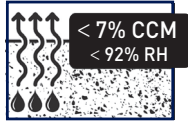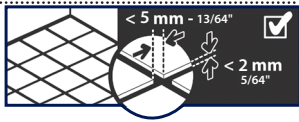Concrete floor, painted concrete, levelling compound, cement based screed, anhydrite (calcium sulphate)-based screed	✓	Moisture content: Cement based substrate < 7 % CCM, 92 % RH - Anhydrite-based substrate < 1 %. If necessary, prepare the support and apply a smoothing compound to eliminate any irregularities	
Ceramic tiles	✓	If tile joints < 5 mm wide and < 2mm deep, and no unevenness. Otherwise, apply a grouting product or levelling compound	
Glued compact PVC / rubber / linoleum floor coverings	✓	After examination and repair depending on the condition of the floor covering. If more than 10% is in bad condition, complete removal is necessary followed by new substrate preparation	
Glued foam backed PVC floor coverings	!	In residential areas only. After examination and repair depending on the condition of the floor covering. if more than 10% is in bad condition, complete removal is necessary followed by new substrate preparation.	
Textile floor covering (carpet) / textile-backing PVC floorings	✗	Prohibited	
Vinyl asbestos tiles	✓	Refer to Gerflor's Technical Guide for Overlaying Asbestos Floors	
Acoustic underlayers	!	Only Gerflor underlayers Silence Plus 19 dB (in residential area classified max CEN 23) and Gerflor acoustic 15dB. Refer to corresponding installation guidelines.	
Glued parquet / laminated floor /floating parquet or wood based panels	✗	Prohibited (complete removal)	
OSB	✗	Complete removal or lining boards	
Wood-based panel flooring on joists or battens / parquet nailed on battens ventilated underneath	✓	Allowed	
Water reversible underfloor heating	✓	Allowed	
Underfloor heating with circulating water, max temperature 28°C	✓	Allowed	
Radiant electric underfloor heating	!	Gluing mandatory	

The preparation of the substrate must comply with the current relevant standards in the country of use.

For any information on product properties and usages, please refer to its technical datasheet: www.gerflor.com.

Virtuo 30 Clic

CONDITIONS

SUBSTRATES

ACCESSORIES

INSTALLATION

<p>TOOLS</p>	<p>Cutter - Tape measure - Metal ruler - Non-rebound mallet – Ref.: 94964 from ROMUS - LVT-Clic roller –Ref.: 93153 from ROMUS Mitre shears - Reference ROMUS: 93401 / JANSER: 237 530 000</p>
<p>ADHESIVES FOR DIRECT SUNLIGHT AREAS</p>	<p>Refer to adhesive manufacturers recommendations</p>
<p>DIVISIONS</p>	<p>FIX&FREE 100 and ROMUS accessories</p>
<p>ACOUSTIC UNDESLAYER</p>	<p>Gerflor Acoustic 15 dB – Ref.: 17980001 – See Installation Guidelines [330] Gerflor Silence Plus 19 dB – Ref.: 59490001 – See Installation Guidelines [331]</p>
<p>FINISHES</p>	<p>Skirting Design - Ref. : 6086 / Skirting Design - MDF - Ref. : 5947 – See Installation Guidelines [504A] and [504B]. Door threshold: refer to Romus catalogue. Wet rooms (e.g. bathrooms): MS Polymer or PU sealant.</p>

Virtuo 30 Clic

CONDITIONS

SUBSTRATES

ACCESSORIES

INSTALLATION




The floor covering should be examined prior to installation for any visible defects. The flooring must belong to the same production batch. If there are any visible defects, please notify GERFLOR and do not begin installation without its prior approval.


LAYOUT

- Mix the planks/tiles from several different boxes from the same series.
- The planks/tiles must be oriented in the direction of light or in the direction of traffic.


- Perimeter expansion gap: 4-5 mm. At room edges, fixed objects and door threshold. The gap must be covered by a finishing profile. Wet rooms (e.g. bathrooms): MS Polymer or PU sealant under the finishing profile.

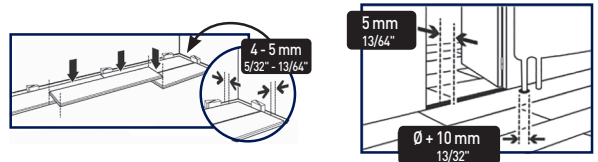

- Start laying the planks/tiles in a corner of the room. Move backwards as you lay, with the tongues facing towards you.

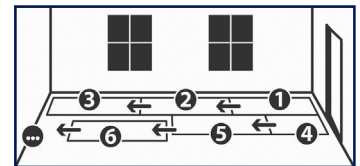


- Offset each row ideally by one third of a plank length, or lay them with «hidden joints». In this case, offset the planks by at least 25 cm, and start the second row with the offset from the last plank of the previous row. Avoid small cuts at the end of the rows.

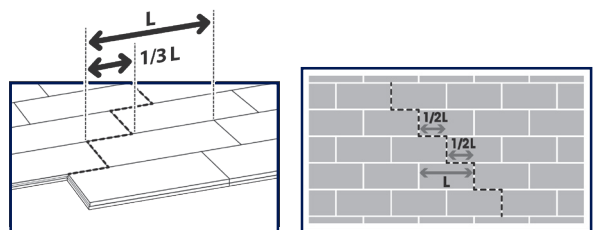


Lay the tiles in staggered joint (offset by half a tile).

- In standard sections, the width of the planks/tiles must be $> 1/3$ plank or $1/2$ tile.

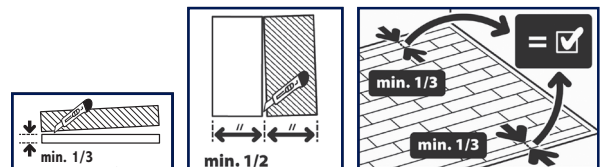

- At the end of the rows, the length of planks/tiles must be > 25 cm, particularly at the entrances and doorways.

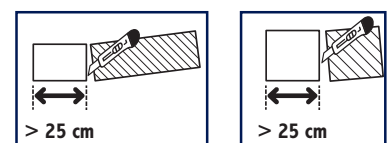

Virtuo 30 Clic

CONDITIONS

SUBSTRATES

ACCESSORIES

INSTALLATION

INTERLOCKING AND CUTTING OUT


- Carefully position the tongue over the groove.



- Strike the plank/tile with a plastic hammer starting from the corner between short edge/long edge.



- Finish the interlocking by rolling with a LVT clic roller.



- Make sure that there is no unevenness between planks/tiles.

Incorrect interlocking may lead to imperfect alignment, gaps between tiles/planks, or clic breakage. If necessary, re-adjust the alignment using a wooden block and a plastic hammer.

- Peripheral cutting using the overlapping method.



- Cutting at the base of door frames.

Use mitre shears (possibly with high leverage).
ROMUS ref: 93401 / JANSER ref: 237 530 000.

